


PARTS LIST FOR CM11 / CM11A

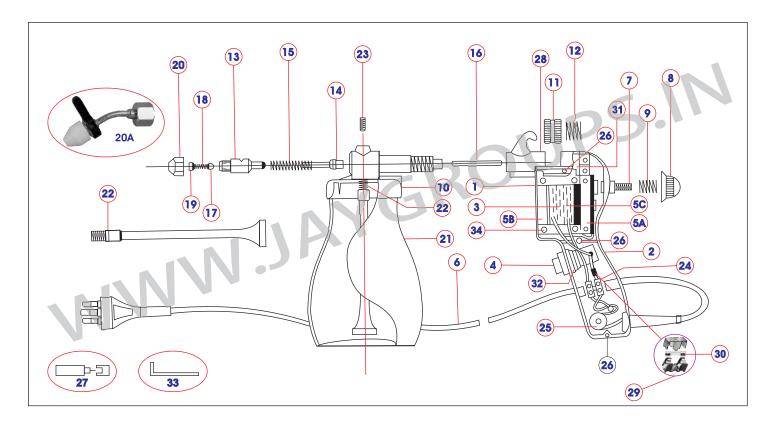

Part No.	Item
1	Gun Housing
2	Gun Housing Cap
3	Inductor Coil (220V/50Hz, Coil Only)
4	Trigger Switch Assembly
5A	l Core
5B	E Core with Inductor Coil
5C	Coil Full Set (E Core + Coil + I Core)
6	Electric Wire
7	Pressure Control Bolt
8	Pressure Control Knob
9	Pressure Control Knob Spring
10	Front Body
11	Adjusting Roller
12	Adjusting Roller Spring
13	Pump Cylinder
14	Piston
15	Piston Spring
16	Intermediate Rod
17	Delivery Valve Cone

Part No.	Item
18	Delivery Valve Spring
19	Swirl Head (17, 18, 19 Form a Set)
20	Nozzle - Straight
20A	Nozzle - Adjustable
21	Solvent Jar
22	Suction Pipe with Filter
23	Conical Screw
24	Connector Block
25	Rubber Bush
26	Gun Housing Screws (3 pcs)
27	Nozzle Cleaner
28	Allen Grub Screw M3
29	Fuse Assembly (Fuse Holder, Glass
	Fuse & Fuse Holder Cover)
30	Glass Fuse [800mA]
31	Coil Bush
32	Switch Ring - Threaded
33	Allen Key
34	Coil Screw, Nut & Washer